


# CEILING TWIST-CLIP




## step 1

Place the ceiling twist-clip against a drop ceiling grid (as shown). Press upward slightly in order to move the ceiling panels up and out of the way.

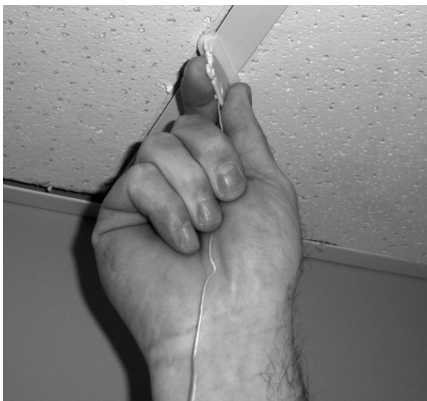


## step 2

Turn the ceiling twist-clip roughly 45 degrees clockwise so that the gripping channels on the top of the clip hold securely on the drop ceiling grid (as shown).

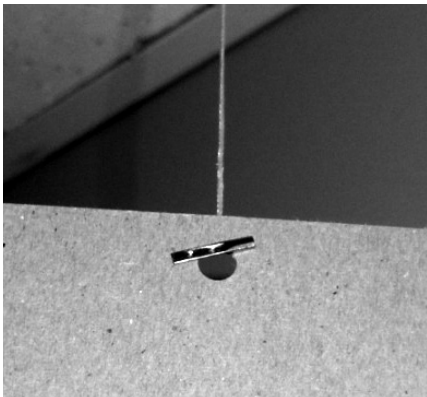

## step 3

Extend the ceiling twist-clip's string to the desired length and place the barbed end of the string through your promotional piece (as shown).

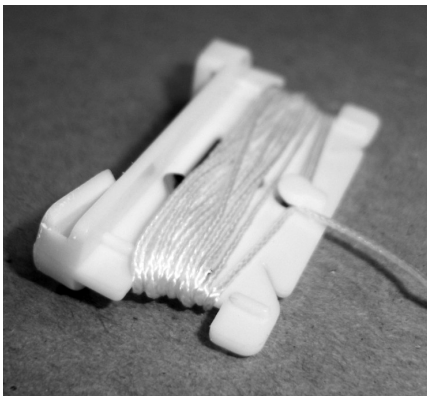

## step 4

To adjust the string, extend a desired length of string and use the half-moon shaped tab on the bottom of the clip to prevent additional string from extending.